 


MAX SUP PUMP Lite

-OV05-NR01-2-

USER GUIDE

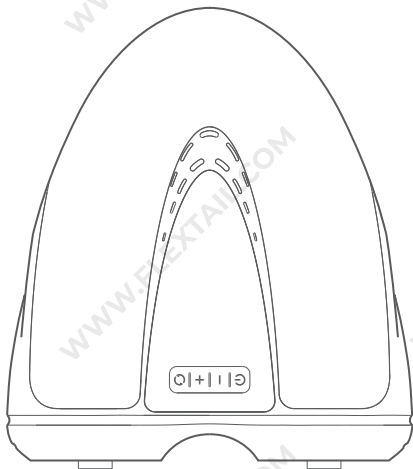

FLEXTAIL™

PACKAGE CONTENT



Nozzle ①



Nozzle ②



Nozzle ③



Nozzle ④



Nozzle ⑤



Nozzle ⑥



 
Nozzle ⑦




Air hose



12V DC Car Connector

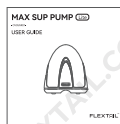


Manual

 


Storage Bag

 PRODUCT DETAILS

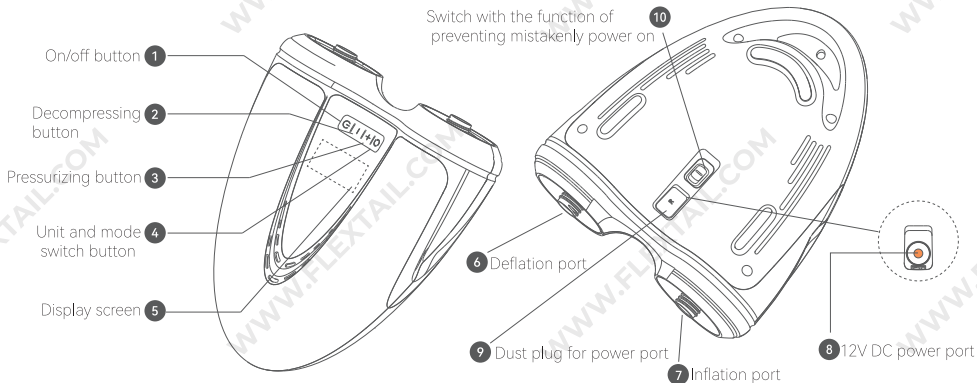


INSTRUCTION

 Inflation

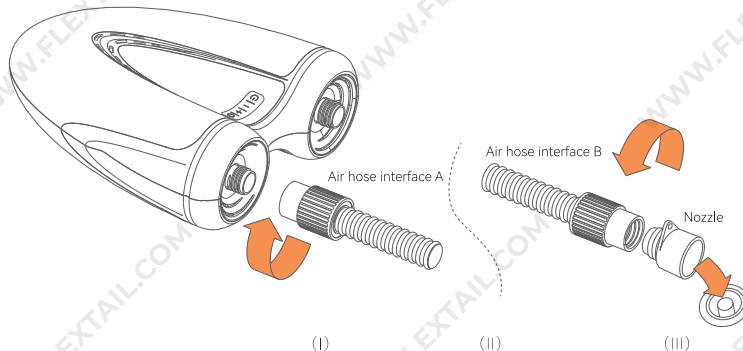

01. Connect the air hose:
Tighten the air hose interface A and inflation port (I). Select a suitable air nozzle, and tighten it with the air hose interface B(II), insert the air nozzle into the inflation valve and tighten it (III).
02. Connect the bottom 12V DC power port to the power supply (built-in battery, can work without external power supply), and turn on the switch with the function of anti-mistakenly power on, the screen will light up.
03. Press the unit and mode switch button to select SUP, KITE, or MAT modes. Long press the unit and mode switch button to select PSI or BAR unit.
04. Press the Add or Subtract key to set the desired pressure (0.3PSI-20PSI/0.02BAR-1.38BAR), in MAT mode, the Add and Subtract keys are used to adjust the countdown time between 1-10min.
05. After completing the above steps, press the Start/Stop key to start inflation.
06. Press the Start/Stop key to stop inflation.
07. When the air pressure reaches the preset pressure(SUP and KITE mode), the pump will stop automatically (In MAT mode, when the time reaches the set time, the pump will stop).
08. After the inflation is completed, press the switch that anti-mistakenly power on to shut down and the screen will go out.

Deflation

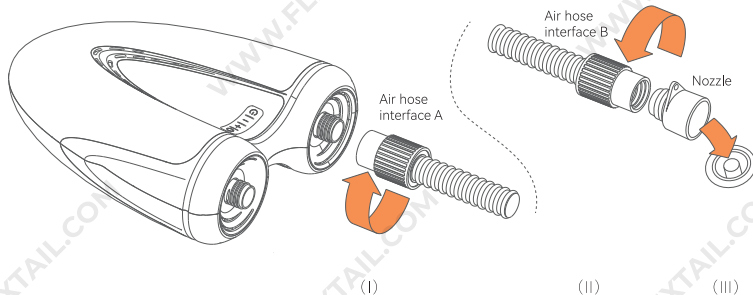

01. Connect the air hose:
Tighten the air hose interface A and inflation port (I). Select a suitable air nozzle, and tighten it with the air hose interface B(II), insert the air nozzle into the deflation valve and tighten it (III).
02. Connect the bottom 12V DC power port to the power supply (built-in battery, can work without external power supply) turn on the switch with the function of anti-mistakenly power on, and the screen will light up.
03. Press the Start/Stop key to start deflation (Press the unit and mode switch button to select the MAT function before deflation to set the stop time).
04. During deflation, please pay attention to the progress of deflation. When the gas inside the product has been pumped out, please immediately press the switch to stop the air pump. This will avoid overheating of the air pump.
05. After the deflation is completed, press the switch that anti-mistakenly power on to shut down and the screen will go out.

CAUTIONS

01. The pump is not a toy. Please keep the product away from children and keep it out of reach.
02. This product is suitable for SUP Boards with pressure lower than 20PSI, or other inflatable products with pressure lower than this.
03. After inflating a SUP Board or other similar pressure product, please wait 10 minutes before using it again.
04. Please check the pump before use. If any abnormality is found, do not use it.
05. If there is abnormal noise or high temperature during inflation, please stop using it immediately.
06. Please do not leave it during inflation to avoid accidents.
07. Please ensure that the pump inflation and deflation ports are not blocked all the time.
08. Do not allow water or foreign matter to enter the inflation or deflation port.
09. Do not use strong chemicals or cleaners during cleaning.
10. Do not place the pump in a place that is too cold, too hot, and too wet.
11. When 12V DC power supply is used, the power indicator is always displayed as fully charged, which is regardless of the battery power.
12. When using the fuel truck power supply to power the pump, please start the car first and then connect the power supply to avoid exhausting the car battery.

TROUBLESHOOTING

If the product does not work

01. Please check if there is water or other liquid on the surface.
02. Check whether the fan blade is stuck.
03. Press the switch repeatedly.
04. Other questions? Please contact FLEXTAIL Technology agents or contact us: service@flectailgear.com.

RESERVE PIECE

In addition to a replaceable air hose, air nozzle, and power line, the pump has no other parts for users to replace.

PARAMETER INFORMATION

Weight	1.258kg
Dimension	28.1*24.7*10.2cm
Deflation pressure	4.4kPa
Deflation speed	360L/min
Inflation pressure	20psi
Certification	RoHS FC CE

Inflation speed	360L/min & 90L/min
Rated power	120W
Rated current	10A

WARRANTY TERMS

For the defects in material and workmanship of the product, the original retail purchaser of this product will be provided a warranty service for one year based on purchase data by FLEXTAIL.

If the Buyer discovers a covered defect, the buyer should return the product to the place of purchase. If this is not available, please return the product to the address specified by us. We will repair or replace the modified product at our discretion following the warranty terms. We assume the above responsibilities in accordance with the essential guarantee terms during the warranty period. After the expiration of the warranty, the service will no longer be provided. We reserve the right to require proof of purchase for all warranty applications.

WARRANTIES EXCLUSIONS

We do not warranty products against normal wear, unauthorized modifications or alterations, improper use, improper maintenance, accident, misuse, negligence, damage, or if the Product is used for a purpose for which it was not designed. This warranty gives you specific rights, and you may also have other rights which vary under the laws of your location. Except for expressly stated in this warranty, we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of Product. This warranty is instead of all other warranties, expressed or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you).

GUARANTEE CARD

Product Information	Client Information
Model	Name
Purchase Date	Tel
Color	Email
Purchase Area	Address
Remark	Remark

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

FLEXTAIL™